

---

## DELETING A NUCLIDE

Any nuclide added by the user may be deleted.

When the *Nuclide Menu* appears, press **2** for *DEL NUCLIDE*.

When "SPECIFY NUCLIDE" appears, specify the nuclide to be deleted via the Number/Letter keys.

The name of the nuclide and its half-life will be displayed. If this is the correct nuclide to delete, press **Y**; if not, press **N**.

---

## CHANGING CALIBRATION NUMBERS

The user is allowed to change the calibration number of up to 10 built-in nuclides.

To change a calibration number or restore the original number:

Press **UTIL** from the Measurement Screen.

Press **4** to select *SETUP*.

Press **4** to select *OTHER*.

Enter your password (last 3 digits of the serial number) and press **ENTER**.

From the *Other Menu*, press **4** to select *NUCLIDE DATA*.

When the *Nuclide Menu* appears, press **3**, *CAL NUMBERS*.

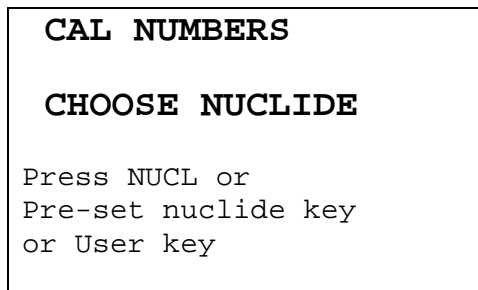


Figure 5-25 Choose Nuclide for User Defined Calibration Number Screen

Choose the nuclide via **NUCL** key, pre-set nuclide key or user key.

### Entering User Defined Calibration Number

If the nuclide does not have a new calibration number, the following screen appears (example is for Tc99m):

```
TC99m
Orig Cal #: 080
Change Cal #?
```

Figure 5-26 Change Original Cal#? Screen

If you want to change the calibration number, press **Y**; if not press **N**.

If **Y** is pressed, you will enter the new calibration number.

After the calibration number is entered, the original and new calibration numbers will be displayed for verification.

#### Restoring Original Calibration Number

If a user defined calibration number has been entered for the chosen nuclide, the following screen appears (in the example, 082 is the new cal# for Tc99m)

```
TC99m
Orig Cal #: 080
New Cal #: 082
Restore Orig Cal # ?
```

Figure 5-27 Restore Original Cal#? Screen

Press **Y** to restore the original calibration number. Press **N** to keep the new calibration number.